



Instruction Manual
8 Bottle Wine Cooler

Model: iceQ8BWC



Introduction

Thank you for choosing the iceQ 8 Bottle Wine Cooler..

Important safety information is highlighted for your attention. It is essential to comply with these instructions for your own safety.

General Notes

Please read the operating instructions carefully before putting the appliance into operation. Ensure all packaging and instruction manuals are kept. If you give this appliance to other people, please also pass on the operating instructions.

- The appliance is designed for intermittent domestic use only. This appliance is not fit for commercial use or outdoor use. Keep it away from sources of heat, direct sunlight, damp and humid environments. Keep away from surroundings with sharp edges.
- When cleaning or moving, switch off the appliance and always pull the plug away from the socket. If not in use, remove attached accessories.
- The device and the mains cable must be checked regularly for signs of damage. If damaged, the device must not be used.
- Use official spare parts only.



WARNING:

- Keep all packaging, foils and parts out of the reach of small children and pets. Small parts may cause suffocation, choking or serious injury.

Special Safety Instructions

- If any damages to the power cable occur, it must be replaced with a new cable available from the manufacturer via the customer service department. Do not use with damaged cable.
- Children should be supervised to ensure they do not play with the appliance. Persons with reduced physical, sensory, or mental capabilities may use the appliance if supervised or given instructions concerning use of the appliance in a safe way, fully understanding the hazards involved.
- Cleaning and user maintenance shall not be performed by children. Adult supervision is required.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep the appliance and its power cable out of reach of young children.
- The appliance is not intended to be operated by means of an external timer or separate remote- control system.
- When cleaning, do not immerse the device in water. Please follow the instructions in the section "Cleaning".



CAUTION: Risk of overheating!

- Keep the ventilation slots free from dust and debris and unobstructed. Do not cover during operation due to the risk of overheating and fire.



CAUTION: This appliance contains flammable refrigerant R600a and foaming agent cyclopentane.

- Please avoid contact with fire.

Intended Use

- The appliance is designed for the cooling or keeping warm of food and beverages.
- It is intended for domestic use such as: in household areas, personal kitchen areas in shops, offices and other work areas;
- To use in guest accommodation such as bedrooms;
- It is not intended for commercial use.
- This appliance must not be exposed to the rain or direct sunlight.

Supplied parts

- 1x Wine Cooler
- 1x Power cable for AC current 220-240V
- 3x Removable internal racks

Unpacking the Appliance

- Remove the appliance from its packaging.
- Remove all packaging materials such as films, filler material, cable clips and carton.
- Check the contents for missing parts.
- Check the appliance for possible transport damage to prevent hazards.

Connection

- Before you plug the power plug into the power outlet, ensure that the mains voltage corresponds with that of the appliance. You can find information about this on the rating plate.
- Only connect the appliance to a properly installed and grounded outlet.

Before first use

- Remove all packaging from the device and the connections and clean the device thoroughly with a soft cloth.
- After plugging the appliance into the socket, please allow 2-3 hours before placing beverages into the cooling compartment.

Instructions

General information

- Never place the appliance next to an open fire and other heat sources.
- Do not open the door more often than required. Do not leave open longer than is necessary. This will affect the process of cooling.

- Do not place directly on the ground. Provide suitable support and flat surface.
- The appliance is not suitable for storing or freezing food.
- The appliance operates the best at ambient temperature of 20-25 °C. Please, turn the appliance off when the ambient temperature is below 10°C.
- If leakage occurs (this can be detected by an unpleasant smell), please;
 - Switch off the cooler immediately;
 - Ventilate the room thoroughly;
 - Call the Customer Service department;

Connection to the Alternating Current

1. Remove the power cable for the direct current, if applicable.
2. Check to make sure that the mains voltage that you wish to use is 220 V~.
3. Plug the power cable for alternating current into the ~AC socket on the appliance.
4. Connect the device to a properly installed, grounded socket.

Temperature Control






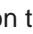
- It is recommended to install the cooler in an are with an ambient temperature of 20-25 °C. The performance of the appliance may be affected if the ambient temperature is below or above the recommended range.
- Temperature range of your cooler is 12-18°C

CONTROL PANEL



You can select temperature display setting from Fahrenheit to Celsius degree by pushing this button for two seconds. Fahrenheit or Celsius degrees indicator will appear in white color in the LCD temperature display window with blue background.



- The internal light can be turned ON or OFF by pushing the  button once.
- The light will turn off automatically if it remains ON for 10 minutes.
- The light will turn back ON upon pushing the  button again.
- To select Celsius or Fahrenheit on the temperature display, please press the  button for 2 seconds.
- The cooler is equipped with an automatic control panel lock which will activate 20 seconds after the last button has been touched. Push the  button for 2 seconds to unlock the control panel. You will hear a 'beep' sound to indicate the control panel is active.
- Set the desired temperature by pushing the  or  button on the control panel. The temperature will increase or decrease by 1

Cleaning



CAUTION:

- Do not use a wire brush or any abrasive items.
- Do not use any acidic or abrasive detergents.
- Use a moist towel to clean the inside and the outside. You may add a dish washing liquid.
- Dry with a cloth afterwards.

Storage

- Clean the appliance as described and allow it to dry.
- It is recommended to keep the appliance in the original packaging if not being used.
- Always store the appliance out of the reach of children in a dry, well-ventilated space.

Troubleshooting

- **Appliance is not cooling.**
 - *Possible cause:* There is no electricity being supplied to the appliance.
 - *Resolution:* Check the connection to the energy source.
 - Check the domestic power socket with a different appliance.
 - Check the fuse box.
 - Check whether the connector is plugged correctly into the appliance and into the energy outlet. Does the cigarette lighter of your motor vehicle work without a problem?
 - *Possible cause:* PCB is broken.
 - *Resolution:* Replace with a new PCB.
 - *Possible cause:* Fan is broken.
 - *Resolution:* Replace with a new fan.
 - *Possible cause:* Leakage.
 - *Resolution:* Replace with a new heat pump.
 - *Possible cause:* Cooling module broken.
 - *Resolution:* Replace with a new cooling module with silicone.
- **The cooling performance is poor.**
 - *Possible cause:* Inadequate ventilation.
 - *Resolution:* Keep the ventilation slots free and unobstructed at all times.
 - Do not cover the appliance when operating.
 - Position the appliance so that the air may circulate freely.

- *Possible cause:* High ambient temperature.
- *Resolution:* Ventilate the room to the suggested ambient temperature of 20-25 °C.

- *Possible cause:* Broken gasket.
- *Resolution:* Replace with a new door gasket.

- **The appliance is noisy.**
 - *Possible cause:* Dust in the fan.
 - *Resolution:* Clean the fan thoroughly and remove any obstructions.

 - *Possible cause:* Broken fan.
 - *Resolution:* Replace with a new fan.

 - *Possible cause:* Broken heat pump.
 - *Resolution:* Replace with a new heat pump.

Technical Specifications

Model: iceQ8BWC


Power supply: 220-240V~ 50-60Hz

Power consumption: 55W

Dimensions (mm): 359 x 547 x 530

Net Weight: 15kg

Net Capacity: 37L

Correct DISPOSAL of THIS product	
	<p>This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.</p>



Warning; Risk of fire/
Flammable materials